



Cutting & Interfacing:

1. Cut out your template and use it to cut out 2 interior pieces first. Be sure to put your fabric RIGHT SIDES TOGETHER first, to create 2 cuts at the same time, mirrored from one another.
2. Cut your stabilizer the same way and go ahead and fuse your light weight stabilizer to the wrong side of the lining pieces now.
3. Then take your template and notice the 2 dash marks on the mitten template. Use a ruler to create a straight line from dash to dash. Once you have created that straight line, cut your template on the line.

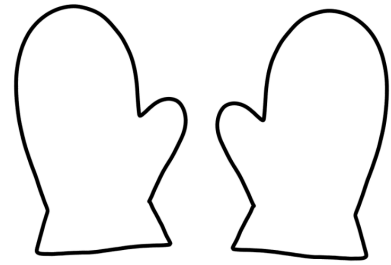

4. The bottom of the mitten (B) will be your contrasting pattern and the top (A) will be the main print. Grab your contrast bottom fabric first and place the fabrics RIGHT SIDES TOGETHER. Take the B template and trace the template out.
5. Once you have outlined the template, take a ruler and add a 1/4" to the top straight edge of the outline on your fabric. This is your extra for the seam allowance.

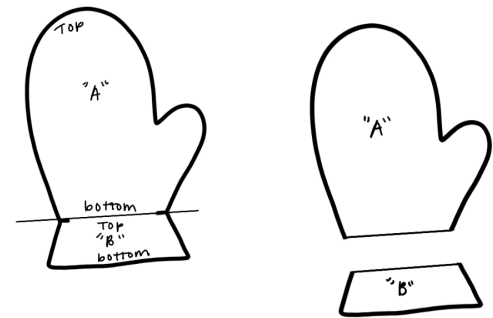


6. Once you have added the 1/4", go ahead and cut out the 2 templates that are mirrored from one another. Label the top fabric 1 and the back 2.
7. Use your paper template to go ahead and take your fusible fleece and cut out 2 mirrored pieces for your B pieces. You do not need to add a 1/4" here, just use your paper template normally. It will be a little bit smaller than the fabric cuts. Fuse it to the wrong sides, aligning it to the bottom of the fabric, leaving a small portion on the top unfused. This is your seam allowance anyways.
8. Now grab your main print for the top of the mitten and use template A. Place your fabrics RIGHT SIDES TOGETHER, and outline the template on the fabric.
9. Once you have created the outline, take your ruler and add a 1/4" from the bottom straight line of the mitten. Again, this is the extra 1/4" for the seam allowance. Go ahead and cut out the 2 mirrored outlines. Label the top fabric 1 and the back 2.
10. Use your paper template to go ahead and take your fusible fleece and cut out 2 mirrored pieces for your B pieces. You do not need to add a 1/4" here, just use your paper template normally. It will be a little bit smaller than the fabric cuts. Fuse it to the wrong sides, aligning it to the top of the fabric, leaving a small portion on the bottom unfused. This is your seam allowance anyways.
11. Hold the bottom portion of the assembled mitten in half to find a center point and mark it on both pieces.

Creating Your Zipper:

1. Take your Zipper and make sure to cut it down to be 6.5" long. Attach your zipper pull to the zipper. Looking at the direction of the zipper pull, take the raw of the zipper that is on top of the curved part of the pull. Create the butler method on that edge. When done, your flat part of the head of the pull should be facing the rear edge of your zipper. Your zipper should now measure 6".
2. Cut a little tab that matches the top portion of your mitten that is a 1 ½" square . Fold it in half the wrong sides together, and press to create a centerfold. Then fold the left and right side towards the middle crease and press. Tuck in the edge of your zipper inside the tab. Top stitch the 3 layers together at a 1/8" seam allowance and trim any excess to be straight with the zipper. Note that the flat side of the zipper pull should be hitting the tab.
3. Fold your assembled zipper in half and mark the center on top and bottom.

Assembling the Zipper Pouch:

1. You should have your two fabrics labeled 1 and 2 from cutting your A template. As well as two fabrics labeled 1 and 2 from your B template.
2. Match the top and bottom to the matching numbers. Take A1 and B1, place them right sides together along the straight edge and sew them together at a ¼" seam allowance. Press your seam open and this step is optional but you may lightly quilt your assembled mitten. Repeat this same process with B1 and B2 and quilt if desired.
3. Take your zipper and place it teeth side down to the bottom right side of your mitten. Matching the 2 center marks together. You may need to make small ⅛" size clips every ½" to help the zipper curve better to the bottom of the mitten. Clip it in place and baste at a ⅛" seam.
4. Grab the lining piece that matches up with the exterior when placed right sides together. Pin all 3 layers together and stitch the zipper in place using a ¼" seam allowance.
5. Flip it right side out and iron the seam holding the zipper down, and top stitch using an ⅛" seam.
6. Repeat the same steps with the remaining exterior and interior.
7. Be sure to keep your zipper almost completely open now. Match the exterior and interior together, right sides together, and pin together. Leaving a section that's about 4" wide on interior layers along the curved side parallel to the side from the thumb.

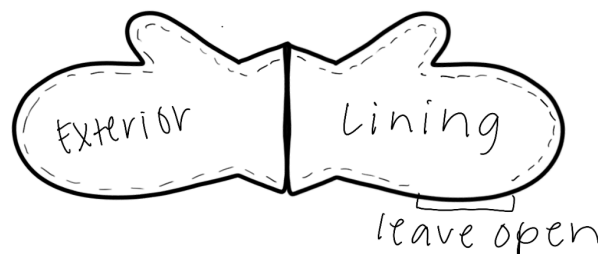

8. Sew all the way around using a ¼" except for the opening.
9. Clip along the curves very carefully to make sure you do not cut the stitching. Be sure to clip into the corner where the thumb sticks out as well to release tension for a better shape.

10. Turn it right side out, and sew your opening inside your lining shut and press out all your wrinkles and crinkles and enjoy!

Xo Boki